

# Confetti Shot Machine

## USER MANUAL



### I. NOTICE

1. Please read the manual carefully before using this machine.
2. Only special 250V/10A (110V available) three wire power supply to be used, it should be grounded and don't keep earth line and live line together.
3. You must unplug the power cable when you do not use the machine, clean, install or remove accessories.
4. Do not place this machine in the rainy or humid environment to use.
5. It is forbidden to let the machine or power plug, cable in the water or other liquid.
6. Please notice that the four shots can shot 4 pcs electric confetti cannon max at one time.
7. Please make sure all parts are connected well before you turn on power of the machine.
8. Regarding four shots, when operation, if you shot one of four, you have to shot the else three in 3 seconds
9. If machine broken, please cut off the power right now, and do not disassemble the machine and contact with your supplier to repair the machine.
10. The machine works with electric confetti cannon.
11. Don't point the electric confetti cannon output mouth directly to people or any goods.

The electric confetti cannon please notice to use them carefully, no place near from any flammable dangerous goods around, and no let it under the sun for long time.

## II. PRODUCT FEATURE

1. Advance design and beautiful outlook.
2. The shooting height of confetti is based on different electric confetti cannon.
3. Special angel adjustable design.

## III. TECHINCAL PARAMETER

Voltage: 220V/50Hz(or 110V/60Hz)

Power: 60W

Product Size : 55\*22\*19cm

Packing Size : 59\*25\*21cm

Control mode : DMX 512 & Remote

DMX Channel : 8 Channels

Channel 1 : shot 1

Channel 2: shot 2

Channel 3: shot 3

Channel 4: shot 4

Channel 5: shot 1,2,3,4

Channel 6: shot from left to right

Channel 7 :shot from right to lift

Channel8:Shot from middle to aside

## IV. INSTALLATION

### ● Installation Preparation

1. Open the packing box, counting the accessories accompanied, read the manual carefully.
2. The machine works with electric confetti cannon (need purchase separately).
3. Please check all parts of the machine are intact before first use.
4. Check the electric power and socket are compliance with requirements.

### ● Installation

5. Please put the machine in its proper place.
6. Adjust the angle of the machine via Angle adjustable knob as you want.
7. Connect the machines and dmx controller with dmx cables.
8. Plug in power cable into power socket.
9. The machine is controlled by dmx512, it have 6 channels
10. First set the dmx address of the machine, turn on the power of dmx controller, the green led light in the dmx dips will be on-if the machine power is on also.
11. Turn on the machine power, the Power Indicator will be on then.
12. Output dmx signal to the machines, let the machine in ready status.
13. Put the electric confetti cannon in the holder and screw up it.
14. Put the cable of the electric confetti cannon into cable socket , notice the placing sequence when four shots (there are numbers to show the sequence), check the indicator, if light, the cannon is good

- If all ready, you could use the controller to control the machine to shot the electric confetti cannon then.

- Dismount**

- After using, first turn off the power of the machine.
- Disconnect the dmx cables between the machines and controller.
- Adjust the angle of the machine at vertical position.
- Dismount the finished confetti cannon.

- MAINTENANCE**

Keep the machine in the dry and clean environment.

- AFTER SALE SERVICE**

The warranty time is one year since the date of purchase, you may get help and solve way through our technical support at any time, and we could offer free parts necessary to repair products.

One of the following conditions not covered under warranty:

- Because the consumer use, maintenance, transportation, damage caused by improper storage;
- Non designated personnel to repair the damage caused by the disassembly of products;
- Because of damage caused by force majeure. Abnormal voltage, such as fire, earthquake, tsunami, debris flow;

## V. TROUBLESHOOTING

No	Problem	Reason	Solution
1	Power Indicator is not On, no power	Power cable is not connected	Check power cable
2	Indicator of Cannon is not on	Electric Confetti Cannon is not good	Change the electric confetti cannon
3	No work but power is on	Dmx cable is not connected	Check dmx cable
		Dmx address is not set or more than 512	Set right dmx address
4	Confetti sprayed is not high enough	Problem of electric confetti cannon	Change electric confetti cannon
5	The electric confetti cannon shot is not according correct sequence	No connect the cable in sequence	According the number of the machine to connect the electric confetti cannon cable